# Monitoring relays - GAMMA series

- AC/DC Voltage monitoring in 1-phase mains
- Multifunction
- 16.6 to 400Hz
- Fault latch
- Supply voltage selectable via power modules
- 1 change-over contact
- Width 22.5mm
- Industrial design



## Technical data

#### 1. Functions

AC/DC voltage monitoring in 1-phase mains with adjustable thresholds, timing for start-up suppression and tripping delay separately adjustable, fault latch and the following functions (selectable by means of retange witch)

(selectable by means of rotary switch)

OVER

Overvoltage mo

OVER Overvoltage monitoring UNDER Undervoltage monitoring

WIN Monitoring the window between Min and

Max

## **→** 2. Time ranges

Start-up suppression time: Os 10s
Tripping delay: 0.1s 10s

## **罗** 3. Indicators

Green LED ON: indication of supply voltage

Green LED flashing: indication of start-up suppression time

Yellow LED ON/OFF: indication of relay output Red LED ON/OFF: indication of failure

Red LED flashing: of the corresponding threshold indication of tripping delay of the corresponding threshold

## **▶** 4. Mechanical design

Self-extinguishing plastic housing, IP rating IP40 Mounted on DIN-Rail TS 35 according to EN 50022

Mounting position: any

Shockproof terminal connection according to VBG 4 (PZ1 required),

IP rating IP20

Tightening torque: max. 1Nm

Terminal capacity:

1 x 0.5 to 2.5mm² with/without multicore cable end

1 x 4mm² without multicore cable end

2 x 0.5 to 1.5mm² with/without multicore cable end

2 x 2.5mm² flexible without multicore cable end

### **罗** 5. Input circuit

Supply voltage:

12 to 400V AC terminals A1-A2 (galvanically separated)

selectable via power modules TR2

Tolerance: according to specification

of power module

Rated frequency: according to specification

of power module 2VA (1.5W)

Rated consumption: 2VA (1.3 Duration of operation: 100% Reset time: 500ms

Residual ripple for DC: -

Drop-out voltage: >30% of the supply voltage
Overvoltage category: III (according to IEC 60664-1)

Rated surge voltage: 4kV

## **▶** 6. Output circuit

1 potential free change-over contact Rated voltage: 250V AC Switching capacity (distance <5mm): 750VA (3A / 250V AC) Switching capacity (distance >5mm): 1250VA (5A / 250V AC)

Fusing: 5A fast acting Mechanical life:  $20 \times 10^6$  operations Electrical life:  $2 \times 10^6$  operations

at 1000VA resistive load
Switching frequency: max. 60/min at 100VA resistiv

max. 60/min at 100VA resistive load max. 6/min at 1000VA resistive load

(according to IEC 947-5-1)

Overvoltage category: III (according to IEC 60664-1)

Rated surge voltage: 4kV

### 7. Measuring circuit

Measured variable: DC or AC sinus (16.6 to 400Hz)

Input:

30V AC/DC terminals E-F1(+) 60V AC/DC terminals E-F2(+) 300V AC/DC terminals E-F3(+)

Overload capacity:

30V AC/DC 100V<sub>eff</sub> 60V AC/DC 150V<sub>eff</sub> 300V AC/DC 440V<sub>eff</sub> Input resistance:

30V AC/DC 47kΩ 60V AC/DC 100kΩ 300V AC/DC 470kΩ

Switching threshold

 $\begin{array}{lll} \text{Max:} & 10\% \text{ to } 100\% \text{ of } \text{U}_{\text{N}} \\ \text{Min:} & 5\% \text{ to } 95\% \text{ of } \text{U}_{\text{N}} \end{array}$ 

Overvoltage category: III (according to IEC 60664-1)

Rated surge voltage: 4kV

## **▶** 8. Control contact Y (equipotential with measuring circuit)

Function: fault latch (bridge Y1-Y2)

Loadable: no Line length Y1-Y2: max. 10m

Control pulse length: -

Reset: normally closed contact in the input circuit

## 9. Accuracy

Base accuracy: ±5% (of maximum scale value)
Frequency response: -10% to +5% (16.6 to 400Hz)
Adjustment accuracy: ≤5% (of maximum scale value)

 $\begin{tabular}{lll} Repetition accuracy: & \le 2\% \\ Voltage influence: & \le 0.5\% \\ Temperature influence: & \le 0.1\% \ /\ ^{\circ}C \\ \end{tabular}$ 

#### 10. Ambient conditions

Ambient temperature: -25 to +55°C (according to IEC 68-1) -25 to +40°C (according to UL 508)

Storage temperature: -25 to +70°C
Transport temperature: -25 to +70°C
Relative humidity: -25 to +70°C
15% to 85%

(according to IEC 721-3-3 class 3K3)

Pollution degree: 3 (according to IEC 60664-1)


## Functions

When the supply voltage U is applied, the output relay R switches into on-position (yellow LED illuminated) and the set interval of the start-up suppression (START) begins (green LED U flashes). Changes of the measured voltage during this period do not affect the state of the output relay. After the interval has expired the green LED is illuminated steadily.

For all the functions the LEDs MIN and MAX are flashing alternating, when the minimum value for the measured voltage was chosen to be greater than the maximum value.

#### Overvoltage monitoring (OVER)


When the measured voltage exceeds the value adjusted at the MAX-regulator, the set interval of the tripping delay (DELAY) begins (red LED MAX flashes). After the interval has expired (red LED MAX illuminated), the output relay switches into off-position (yellow LED not illuminated). The output relay again switches into on-position (yellow LED illuminated), when the measured voltage falls below the value adjusted at the MIN-regulator (red LED MAX not illuminated). If the LATCH-function is selected (bridge Y1-Y2) and the measured voltage remains above the MAX-value longer than the set interval of the tripping delay, the output relay remains in the off-position even if the measured voltage falls below the value adjusted at the MIN-regulator. After resetting the failure (interrupting and re-applying the supply voltage), the output relay switches into on-position and a new measuring cycle begins with the set interval of the start-up suppression (START).

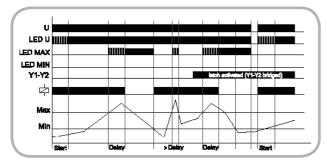

## Undervoltage monitoring (UNDER)


When the measured voltage falls below the value adjusted at the MIN-regulator, the set interval of the tripping delay (DELAY) begins (red LED MIN flashes). After the interval has expired (red LED MIN illuminated), the output relay switches into off-position (yellow LED not illuminated). The output relay again switches into on-position (yellow LED illuminated), when the measured voltage exceeds the value adjusted at the MAX-regulator.

If the LATCH-function is selected (bridge Y1-Y2) and the measured voltage remains below the MIN-value longer than the set interval of the tripping delay, the output relay remains in the off-position even if the measured voltage exceeds the value adjusted at the MAX-regulator. After resetting the failure (interrupting and re-applying the supply voltage), the output relay switches into on-position and a new measuring cycle begins with the set interval of the start-up suppression (START).

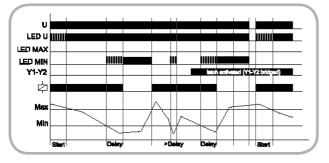


#### Window function (WIN)

The output relay switches into on-position (yellow LED illuminated) when the measured voltage exceeds the value adjusted at the MIN-regulator. When the measured voltage exceeds the value adjusted at the MAX-regulator, the set interval of the tripping delay (DELAY) begins (red LED MAX flashes). After the interval has expired (red LED MAX illuminated), the output relay switches into off-position (yellow LED not illuminated). The output relay again switches into on-position (yellow LED illuminated) when the measured voltage falls below the value adjusted at the MAX-regulator (red LED MAX not illuminated). When the measured voltage falls below the value adjusted at the MIN-regulator, the set interval of the tripping delay (DELAY) begins again (red LED MIN flashes). After the interval has expired (red LED MIN illuminated), the output relay switches into off-position (yellow LED not illuminated).

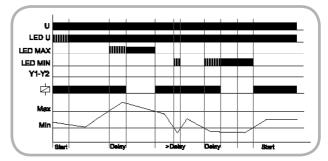


If the LATCH-function is selected (bridge Y1-Y2) and the measured voltage remains below the MIN-value longer than the set interval of the tripping delay, the output relay remains in the off-position even if the measured voltage exceeds the value adjusted at the MIN-regulator. If the measured voltage remains above the MAX-value longer than the set interval of the tripping delay, the output relay remains in the off-position even if the measured voltage falls below the value adjusted at the MAX-regulator. After resetting the failure (interrupting and re-applying the supply voltage), the output relay switches into on-position and a new measuring cycle begins with the set interval of the start-up suppression (START).

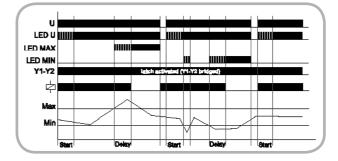


# Connections


Range 30V with power module 24V AC with fault latch

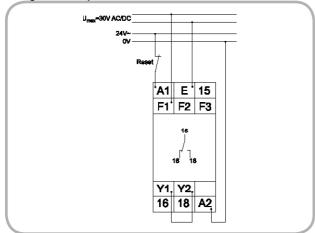

**▶** Range 60V with power module 230V AC with fault latch

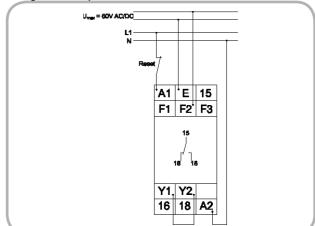

**▶** Range 300V with power module 400V AC without fault latch

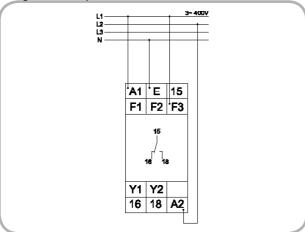

# Dimensions

